

## Door Locks

### n Locking the vehicle from inside

#### ► Inside lock button



- 1 Locks
- 2 Unlocks

#### ► Door lock switch



Operates all door locks.

- 1 Locks
- 2 Unlocks

### n Locking the vehicle from outside

#### ► Using the entry function or wireless remote control (→P:9, 10)

### n Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

## Power Windows



### 1 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

## Moon Roof\*

### n Opening and closing



### 1 Open

Stops just before it is opened fully. Press the switch again to fully open.

### 2 Close

To stop partway, press the switch lightly.

### n Tilt up and down



### 1 Tilt up

### 2 Tilt down

To stop partway, press the switch lightly.

\*: If equipped

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

## Hood



1 Pull the hood lock release lever.




2 Insert your fingers under the hood, pull the hood catch and lift the hood.

## Trunk

### n Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

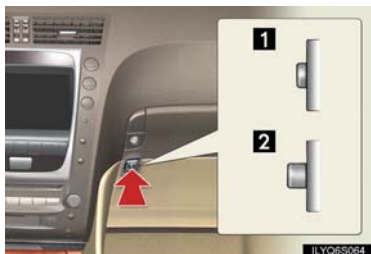

To disable the trunk opener, turn OFF the main switch in the glove box.

**1** ON

**2** OFF

When the trunk opener is disabled, the trunk cannot be opened using the entry function or the wireless remote control.

### n Entry function and wireless remote control

→P.9, 10